




SUITABLE FOR
MOST TYPES OF HARD FLOOR

NOT SUITABLE FOR
HAZARDOUS, ZONED AREAS OR
UNSWEPT FLOORS, DUST & DEBRIS MUST BE
SWEEPED/VACUUMED PRIOR TO USING THIS MACHINE

HOW IT WORKS
ONLY LOW FOAM SCRUBBER DRYER DETERGENT
& COLD/TEPID WATER IS PUT DOWN
AGGITATED BY BRUSH/PAD TO SCRUB/CLEAN THE FLOOR
& VACUUMED BACK UP LEAVING THE FLOOR DRY

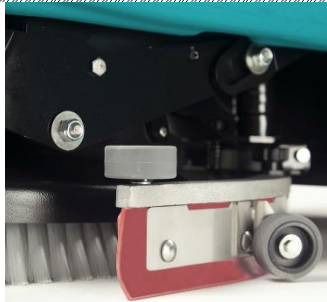

ACCESSORIES
(BRUSHES, PADS, DETERGENT, SQUEEGEE RUBBERS)
ENSURE YOU ARE USING THE
CORRECT COMBINATION OF ACCESSORIES
FOR THE TASK AND TYPE OF FLOOR



WHERE DOES THE DIRTY WATER GO?
IN THE RECOVERY TANK – EMPTY WHEN FULL/AFTER USE

WHAT ABOUT THE FILTERS?
RINSE BALL FILTER (IN RECOVERY TANK
(AFTER EACH USE)

REMOVE & CLEAN SOLUTION TANK
FILTER REGULARLY



HOW LONG WILL IT RUN FOR?
WITH NEW BATTERIES = 2 HRS 40 MINS

WHEN DO I CHARGE IT?
ONLY WHEN IT HAS RUN OUT OF CHARGE

HOW LONG WILL IT TAKE TO CHARGE?
8-12 HOURS (DEPENDING ON SPEC)

WHEN WILL I NEED TO REPLACE THE BATTERIES?
PERFORMANCE MAYBE AFFECTED AFTER AROUND 300-
400 CYCLES (DEPENDING ON SPEC)

EXAMPLES (APPROX):
CHARGE ONCE A DAY = 365 CYCLES PER YEAR = 1 YR
CHARGE TWICE PER WEEK = 104 CYCLES PER YEAR = 3 YRS



- This notice serves as a quick guide to important points to remember
- The machine should be used by authorised trained operators only
- All operators must read & understand the operator manual prior to use



SCAN ME

BEFORE USE

- Check charger is showing fully charged green light (if on charge)
- **Check brush or pad – WARNING USING DIRTY/WORN PAD WILL DAMAGE YOUR FLOOR**
- Check squeegee rubbers
- Check filters
- **Check recovery tank is empty and solution tank is full**

OPERATION

- Lower squeegee lever
- Turn on using power switch – check green light is on
- Lower brush onto floor – switch on brush
- Press brush switch to activate brush
- Press vacuum switch to activate vacuum
- Adjust the amount of detergent required using the tap
- Decrease speed when turning

- For additional cleaning power, use brush/pad to pre-scrub before switching on vacuum & lowering the squeegee

AFTER USE

- Switch off vacuum, brushes and power
- **Empty and rinse out tanks**
- **Check brush/pad (remove brush/pad holder at least weekly to avoid seizing)**
- Check squeegee rubbers
- **Check & clean filters**
- Wipe machine down with damp cloth
- **Charge (if flat)**

DO NOT

- **DO NOT** use on an unswept floor, it will block the machine
- **DO NOT** use with non-approved detergent (only a very small amount of low-foam s/dryer detergent)
- **DO NOT** use on gradients exceeding 2%
- **DO NOT** move the machine backwards with the squeegee bar down on the floor
- **DO NOT** opportune charge (e.g. at tea breaks etc, only charge when the machine is flat)