




**SUITABLE FOR
MOST TYPES OF HARD FLOOR**

**NOT SUITABLE FOR
HAZARDOUS, ZONED AREAS OR
UNSWEEPED FLOORS, DUST & DEBRIS MUST BE
SWEEPED/VACUUMED PRIOR TO USING THIS MACHINE**

HOW IT WORKS

**ONLY LOW FOAM SCRUBBER DRYER DETERGENT
& COLD/TEPID WATER IS PUT DOWN, AGGITATED BY
BRUSH/PAD TO SCRUB/CLEAN THE FLOOR
& VACUUMED BACK UP LEAVING THE FLOOR DRY**

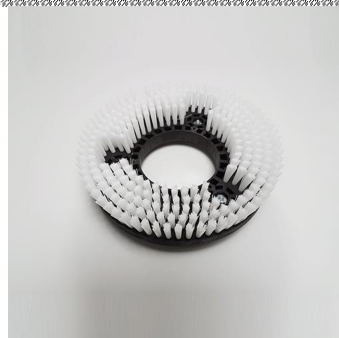

**ACCESSORIES
(BRUSHES, PADS, DETERGENT, SQUEEGEE RUBBERS)
ENSURE YOU ARE USING THE
CORRECT COMBINATION OF ACCESSORIES
FOR THE TASK AND TYPE OF FLOOR**

**WHERE DOES THE DIRTY WATER GO?
IN THE RECOVERY TANK – EMPTY WHEN FULL/AFTER USE**



**WHAT ABOUT THE FILTERS?
RINSE BALL FILTER (IN RECOVERY TANK
(AFTER EACH USE)**

**REMOVE & CLEAN SOLUTION TANK
FILTER REGULARLY**

**HOW LONG WILL IT RUN FOR?
WITH NEW BATTERIES = 2-3 HOURS+**

**WHEN DO I CHARGE IT?
ONLY WHEN IT HAS RUN OUT OF CHARGE**

**HOW LONG WILL IT TAKE TO CHARGE?
8-12 HOURS (DEPENDING ON SPEC)**

**WHEN WILL I NEED TO REPLACE THE BATTERIES?
PERFORMANCE MAYBE AFFECTED AFTER AROUND 700
CYCLES (DEPENDING ON SPEC)**

EXAMPLES (APPROX):

**CHARGE ONCE A DAY = 365 CYCLES PER YEAR = 2 YRS
CHARGE TWICE PER WEEK = 104 CYCLES PER YEAR = 6.5 YRS**





- This notice serves as a quick guide to important points to remember
- The machine should be used by authorised trained operators only
- All operators must read & understand the operator manual prior to use



SCAN ME

BEFORE USE

- Check charger is showing fully charged green light (if on charge)
- **Check brush/pad holder – WARNING USING DIRTY/WORN PAD MAY DAMAGE FLOOR**
- Check squeegee rubbers
- **Check recovery tank is empty and solution tank is full**
- Check recovery tank gasket cover

OPERATION

- Switch on using key
- Lower brush plate & switch on brush
- Lower squeegee & switch on vacuum
- Set desired solution level using lever
- **Do not stop the machine over the same area with brushes spinning (could damage the floor)**
- At the end of each washing operation, lift the brush, turn the brush switch off and continue with the squeegee down to complete drying the floor
- Lift the squeegee & wait several seconds before switching off the vacuum, this will stop any water droplets falling onto the floor

AFTER USE

- **Drain & rinse the tanks**
- **Check brush/pad (must be removed at least once per week to avoid seizure)**
- Clean squeegee
- **Clean vac filter (daily)**
- **Clean solution filter (weekly)**

DO NOT

- **DO NOT** use anything other than low foam detergent in the machine
- **DO NOT** opportune charge (e.g. at tea breaks etc, only charge when the machine is flat)
- **DO NOT** use the machine on an unswept floor
- **DO NOT use hot water** in the machine (cold/lukewarm only)

CALL 0141 647 4200 FOR ASSISTANCE