



**SUITABLE FOR**  
MOST TYPES OF HARD FLOOR

**NOT SUITABLE FOR**  
HAZARDOUS, ZONED AREAS OR  
UNSWEPT FLOORS, DUST & DEBRIS MUST BE  
SWEEPED/VACUUMED PRIOR TO USING THIS MACHINE

**HOW IT WORKS**  
**ONLY LOW FOAM SCRUBBER DRYER DETERGENT**  
& COLD/TEPID WATER IS PUT DOWN, AGGITATED BY  
BRUSH/PAD TO SCRUB/CLEAN THE FLOOR  
& VACUUMED BACK UP LEAVING THE FLOOR DRY



**ACCESSORIES**  
**(BRUSHES, PADS, DETERGENT, SQUEEGEE RUBBERS)**  
ENSURE YOU ARE USING THE  
CORRECT COMBINATION OF ACCESSORIES  
FOR THE TASK AND TYPE OF FLOOR



**WHERE DOES THE DIRTY WATER GO?**  
IN THE RECOVERY TANK – EMPTY WHEN FULL/AFTER USE

**WHAT ABOUT THE FILTERS?**  
RINSE BALL FILTER (IN RECOVERY TANK  
( AFTER EACH USE)

REMOVE & CLEAN SOLUTION TANK  
FILTER REGULARLY



**HOW LONG WILL IT RUN FOR?**  
**WITH NEW BATTERIES = 3-4 HOURS+**

**WHEN DO I CHARGE IT?**  
**ONLY WHEN IT HAS RUN OUT OF CHARGE**

**HOW LONG WILL IT TAKE TO CHARGE?**  
8-12 HOURS (DEPENDING ON SPEC)

**WHEN WILL I NEED TO REPLACE THE BATTERIES?**  
PERFORMANCE MAYBE AFFECTED AFTER AROUND 700-1000  
CYCLES (DEPENDING ON SPEC)

EXAMPLES (APPROX):  
CHARGE ONCE A DAY = 365 CYCLES PER YEAR = 2-3 YRS  
CHARGE TWICE PER WEEK = 104 CYCLES PER YEAR = 6 YRS+



- This notice serves as a quick guide to important points to remember
- The machine should be used by authorised trained operators only
- All operators must read & understand the operator manual prior to use



**SCAN ME**

### **BEFORE USE**

- Check charger is showing fully charged green light (if on charge)
- **Check brush/pad holder – WARNING USING DIRTY/WORN PAD MAY DAMAGE FLOOR**
- Check squeegee rubbers
- **Check recovery tank is empty and solution tank is full**
- Check recovery tank gasket cover

### **OPERATION**

- Switch on using key
- Lower brush plate & switch on brush
- Lower squeegee & switch on vacuum
- Set desired solution level using lever
- **Do not stop the machine over the same area with brushes spinning (could damage the floor)**
- At the end of each washing operation, lift the brush, turn the brush switch off and continue with the squeegee down to complete drying the floor
- Lift the squeegee & wait several seconds before switching off the vacuum, this will stop any water droplets falling onto the floor

### **AFTER USE**

- **Drain & rinse the tanks**
- **Check brush/pad (must be removed at least once per week to avoid seizure)**
- Clean squeegee
- **Clean vac filter (daily)**
- **Clean solution filter (weekly)**
- **Charge (if flat)**

### **DO NOT**

- **DO NOT** use anything other than low foam detergent in the machine
- **DO NOT** opportune charge (e.g. at tea breaks etc, only charge when the machine is flat)
- **DO NOT** use the machine on an unswept floor
- **DO NOT use hot water** in the machine (cold/lukewarm only)

**CALL 0141 647 4200 FOR ASSISTANCE**