



SUITABLE FOR
MOST TYPES OF HARD FLOOR


NOT SUITABLE FOR
HAZARDOUS, ZONED AREAS OR
UNSWEEPED FLOORS, DUST & DEBRIS MUST BE
SWEEPED/VACUUMED PRIOR TO USING THIS MACHINE

HOW IT WORKS
ONLY LOW FOAM SCRUBBER DRYER DETERGENT
& COLD/TEPID WATER IS PUT DOWN, AGGITATED BY
BRUSH/PAD TO SCRUB/CLEAN THE FLOOR
& VACUUMED BACK UP LEAVING THE FLOOR DRY



ACCESSORIES
(BRUSHES, PADS, DETERGENT, SQUEEGEE RUBBERS)
ENSURE YOU ARE USING THE
CORRECT COMBINATION OF ACCESSORIES
FOR THE TASK AND TYPE OF FLOOR

WHERE DOES THE DIRTY WATER GO?
IN THE RECOVERY TANK – EMPTY WHEN FULL/AFTER
USE

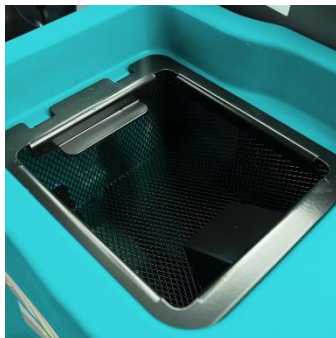

WHAT ABOUT THE FILTERS?
RINSE BASKET FILTER (IN RECOVERY TANK
(AFTER EACH USE)

REMOVE & CLEAN SOLUTION TANK
FILTER REGULARLY

HOW LONG WILL IT RUN FOR?
WITH NEW BATTERIES = 3-4 HOURS+

WHEN DO I CHARGE IT?
ONLY WHEN IT HAS RUN OUT OF CHARGE

HOW LONG WILL IT TAKE TO CHARGE?
8-12 HOURS (DEPENDING ON SPEC)

WHEN WILL I NEED TO REPLACE THE BATTERIES?
PERFORMANCE MAYBE AFFECTED AFTER AROUND 700-
1000 CYCLES (DEPENDING ON SPEC)

EXAMPLES (APPROX):
CHARGE ONCE A DAY = 365 CYCLES PER YEAR = 2-3 YRS
CHARGE TWICE PER WEEK = 104 CYCLES PER YEAR = 6 YRS+



CALL 0141 647 4200 FOR ASSISTANCE



- This notice serves as a quick guide to important points to remember
- The machine should be used by authorised trained operators only
- All operators must read & understand the operator manual prior to use



SCAN ME

BEFORE USE

- Check battery connector is plugged in
- Check key is inserted correctly
- Check battery charge level
- **Check brushes/pad holders – WARNING USING DIRTY/WORN PADS CAN DAMAGE FLOOR**
- Check splashguard
- Check squeegee rubbers
- **Check recovery tank is empty and solution tank is full**
- Check recovery tank gasket cover

OPERATION

- Switch on using key
- Lower brush plate & switch on brushes
- Lower squeegee & switch on vacuum
- Set desired solution level using lever
- Lubricate the splashguard blades by slowly moving back & forth for 1 metre
- Do not stop the machine over the same area with brushes spinning (could damage the floor)
- If the floor is particularly dirty, pre-scrub the floor before lowering squeegee & switching on the vacuum
- At the end of each washing operation, lift the brushes, turn the brush switch off and continue with the squeegee down to complete drying the floor
- Lift the squeegee & wait several seconds before switching off the vacuum, this will stop any water droplets falling onto the floor

AFTER USE

- **Drain & rinse the tanks**
- **Check brushes/pads (remove brush/pad holder at least weekly to avoid seizure)**
- Clean squeegee
- **Clean solution & vacuum filter (weekly)**
- **Check battery levels (weekly) – wet batteries only**

DO NOT

- **DO NOT** use anything other than low foam detergent in the machine
- **DO NOT** opportune charge (e.g. at tea breaks etc, only charge when the machine is flat)
- **DO NOT** use the machine on an unswept floor
- **DO NOT use hot water** in the machine (cold/lukewarm only)

CALL 0141 647 4200 FOR ASSISTANCE