



CAN COLLECT
DIRT, DUST & SMALL DEBRIS (DRY USE ONLY)

CAN'T COLLECT
ANYTHING WET, HAZARDOUS OR THAT WILL GET WRAPPED
AROUND THE BRUSH (STRING, BANDING, SHRINKWRAP ETC.)

HOW IT WORKS
THE MAIN ROLLER BRUSH CONCEALED UNDERNEATH THE
MACHINE REMOVES THE DIRT FROM THE FLOOR



FRONT BRUSH(ES)
ARE FOR EDGE CLEANING ONLY
HAVE THESE OFF THE FLOOR THE REST OF
THE TIME



WHERE DOES THE DIRT GO?
IN THE FRONT HOPPER – MULTI-LEVEL HYDRAULIC LIFT

WHAT ABOUT THE FILTER GETTING BLOCKED?
LONG-LIFE FILTER FOR FINE DUST

TO CLEAR THE FILTER AUTOMATICALLY
PRESS THE BUTTON REGULARLY (EVERY 10-15 MINS)

PRESS IT AGAIN BEFORE EMPTYING THE BIN



HOW LONG WILL IT RUN FOR?
WITH NEW BATTERIES = 4 HOURS +

WHEN DO I CHARGE IT?
ONLY WHEN IT HAS RUN OUT OF CHARGE

HOW LONG WILL IT TAKE TO CHARGE?
8-12 HOURS (DEPENDING ON SPEC)

WHEN WILL I NEED TO REPLACE THE BATTERIES?
PERFORMANCE MAYBE AFFECTED AFTER AROUND 700-1000
CYCLES (DEPENDING ON SPEC) EXAMPLES (APPROX):
CHARGE TWICE A DAY = 730 CYCLES PER YEAR = 1 YR
CHARGE ONCE A DAY = 365 CYCLES PER YEAR = 2 YRS
CHARGE EVERY 3 DAYS = 122 CYCLES PER YEAR = 6 YRS



- This notice serves as a quick guide to important points to remember
- The machine should be used by authorised trained operators only
- All operators must read & understand the operator manual prior to use



SCAN ME

BEFORE USE

- Check charger is showing fully charged green light (if on charge)
- Check brushes
- Check rubber flaps
- Check filter
- Check container(s) are empty

STARTING THE MACHINE

- Sit on seat (machine functions cut off when not sitting)
- Switch on ignition using key
- Switch on primary motor switch
- Machine is ready to move

STARTING THE FUNCTIONS

- As above – then switch on secondary motor switch
- Machine is ready to work

TURNING OFF THE MACHINE

- Turn off both motor switches
- Turn ignition key to off position

DRIVING THE MACHINE

- Forward – pull lever up & press accelerator pedal
- Reverse – pull lever down & press accelerator pedal
- Decrease speed when turning
- **Switch side brush(es) off, these should be used for cleaning edges only**
- Go slow for most effective sweeping of edges
- In case of emergency pull the emergency brake to stop the machine
- When not in use, ensure parking brake is on
- **Operate filter shaker regularly (every 5 minutes if particularly dusty)**

AFTER USE

- Lift brushes, switch off
- **Empty containers (unload when machine is on flat ground only)**
- Check brushes
- Check rubber flaps
- Check filter
- Wipe machine down with damp cloth
- **Charge (if flat)**
- **Check battery levels (weekly) – wet batteries only**

DO NOT

- **DO NOT** collect string, banding, shrink-wrap or similar this will cause serious damage to the machine
- **DO NOT** opportune charge (e.g. at tea breaks etc, only charge when the machine is flat)

CALL 0141 647 4200 FOR ASSISTANCE