



**CAN COLLECT**  
DIRT, DUST & SMALL DEBRIS (DRY USE ONLY)

**CAN'T COLLECT**  
ANYTHING WET, HAZARDOUS OR THAT WILL GET WRAPPED  
AROUND THE BRUSH (STRING, BANDING, SHRINKWRAP ETC.)

**HOW IT WORKS**  
THE MAIN ROLLER BRUSH CONCEALED UNDERNEATH THE  
MACHINE REMOVES THE DIRT FROM THE FLOOR



**FRONT / SIDE BRUSH(ES)**  
ARE FOR EDGE CLEANING ONLY  
HAVE THESE OFF THE FLOOR THE REST OF  
THE TIME



**WHERE DOES THE DIRT GO?**  
IN THE REAR BIN – REMOVE TO EMPTY

**WHAT ABOUT THE FILTER GETTING BLOCKED?**  
TO CLEAR THE FILTER AUTOMATICALLY  
PRESS THE BUTTON REGULARLY (EVERY 10-15 MINS)

PRESS IT AGAIN BEFORE EMPTYING THE BIN

**HOW LONG WILL IT RUN FOR?**  
WITH NEW BATTERIES = 4 HOURS +

**WHEN DO I CHARGE IT?**  
**ONLY WHEN IT HAS RUN OUT OF CHARGE**

**HOW LONG WILL IT TAKE TO CHARGE?**  
8-12 HOURS (DEPENDING ON SPEC)



**WHEN WILL I NEED TO REPLACE THE BATTERIES?**  
PERFORMANCE MAYBE AFFECTED AFTER AROUND 700-1000  
CYCLES (DEPENDING ON SPEC) EXAMPLES (APPROX):  
CHARGE TWICE A DAY = 730 CYCLES PER YEAR = 1 YR  
CHARGE ONCE A DAY = 365 CYCLES PER YEAR = 2 YRS  
CHARGE EVERY 3 DAYS = 122 CYCLES PER YEAR = 6 YRS



- This notice serves as a quick guide to important points to remember
- The machine should be used by authorised trained operators only
- All operators must read & understand the operator manual prior to use



**SCAN ME**

#### **BEFORE USE**

- Check charger is showing fully charged green light (if on charge)
- Check brushes
- Check rubber flaps
- **Check filter**
- **Check container(s) are empty**

#### **OPERATION**

- Sit on seat
- Switch on using key
- Check safety switch is in correct position
- Check parking brake is off
- Ensure green light is on
- Lower brush onto floor – switch on brush
- Switch drive button to forward
- Turn handlebar anti-clockwise (left hand down) to drive forward
- Decrease speed when turning
- Switch drive button to reverse
- Turn handlebar clockwise (right hand down) to reverse
- Decrease speed when turning
- Switch side brush(es) off, these should be used for cleaning edges only
- Go slow for most effective sweeping of edges
- Raise flap using lever to collect light, bulky debris
- In case of emergency pull the emergency brake to stop the machine
- Operate filter shaker regularly (every 5 minutes if particularly dusty)
- **You should NOT see dust when using this sweeper** – if you can see dust, something needs attention e.g. check the side brush is up / the filter is clean / the bin is empty

#### **AFTER USE**

- Switch off brush switch, lift brush lever
- **Empty containers**
- Check brushes
- Check rubber flaps
- Check filter
- Wipe machine down with damp cloth
- **Charge (if flat)**
- **Top up batteries once a week (wet only)**

#### **DO NOT**

- **DO NOT** collect string, banding, shrink-wrap or similar this will cause serious damage to the machine
- **DO NOT** opportune charge (e.g. at tea breaks etc, only charge when the machine is flat)

**CALL 0141 647 4200 FOR ASSISTANCE**